

Remote Control User Guide

Circa ZG Chair




Remote Control User Guide

Circa ZG Chair

Legs Down – Press and hold the inner button to lower the leg rest to the desired position.

Legs Up – Press and hold the outer button to raise the leg rest to the desired position.

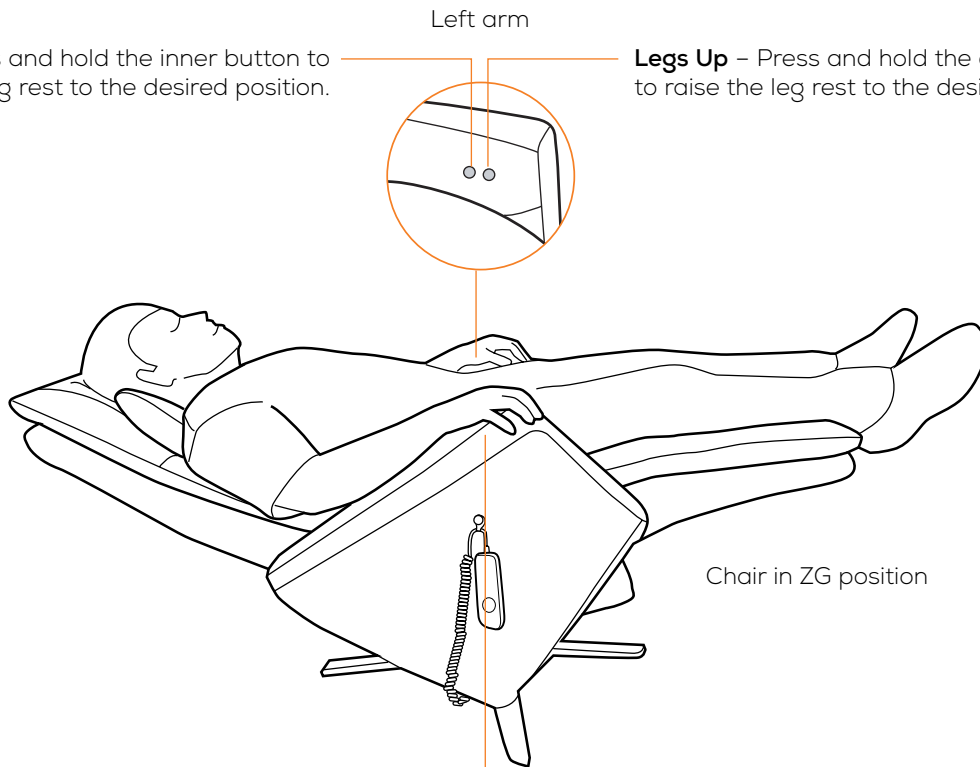


Chair in ZG position

Recline – Press and hold the outer button to recline the chair to the desired position.

Incline – Press and hold the inner button to incline the chair to the desired position.

Right arm

Press the two right-hand in-arm control buttons simultaneously for at least five seconds to lock all in-arm buttons. Repeat to unlock.

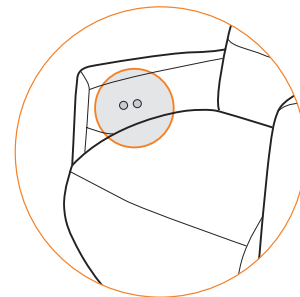

Right arm

For more detailed operation instructions, please see the Use and Care Manual.